






PARTS & ASSEMBLY SHEET

Fixture Name: Torbellino 8106-M1L CDB

This fixture assembled PO: _____ Date: _____

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.


PARTS LIST		Company Name: _____ Co. Account #: _____ to be filled out by retailer	
Canopy  1ea Φ153*32Hmm	Hex Nut  1ea Φ19mm*4mm	Canopy loop and Canopy loop collar  1ea Φ25*45Hmm	
Chain  1ea 1ft	Threaded rod  1ea Φ12*55mm	Wire connectors  3ea Orange	
Chain connector  2ea 23.8*59mm	Mounting Strap  1ea 100mm*20mm, 1ea Φ9*10mm	Mounting Screws  2ea 8/32T*1-1/4"L	
Part Needed _____	Quantity _____	Part Needed _____	Quantity _____
Reason why _____	(missing, scratched, broken glass, bent, bad finish)		
Comments _____			

FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet, but do not install before assembling the fixture.

- By measuring determine correct number of rods needed for proper hanging height. There are 2 optional 12" rods included.
- To shorten the fixture trim the wires to the desired length plus at least 8~10 inches. You must use at least one Rod (K).
- To lengthen the fixture add additional rods (ROD-12 CDB) or additional chain (CHAIN-CDB) available separately.

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.

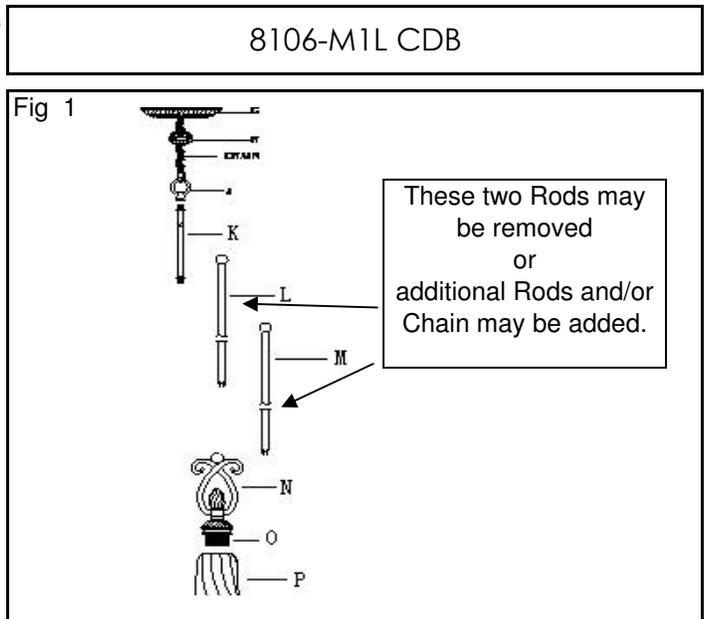


For Customer Service, contact the place of purchase to arrange for replacement parts.

PARTS & ASSEMBLY SHEET

Fixture Name: Torbellino 8106-M1L CDB

4. Pull the fixture's wire through the Rods.
 5. Place Washer (S) between Rod (M) and Frame (N), thread Rod (M) into Frame (N) until tight.
 6. Place Washer (S) between Rods (M) and (L), thread Rod (L) into Rod (M) until tight. repeat for any additional rods.
 7. Feed the fixture wires through the Top loop (J) and pull the wires until taut.
 8. Thread Top loop (J) into Rod (K) until tight.
 9. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain then remove the excess Chain and discard it.
 10. Use one chain connector (T) to attach one end of the chain to the Top loop (J) and close the chain connector.
 11. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.
 12. Slip Canopy loop collar (H) over the Chain, then do the same with the canopy (G).
 13. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (F) and close the chain connector.
 14. Make sure the weight of the chandelier is supported by the chain-not the electrical wire.
- * You may now install the fixture.**
15. Place the glass shade (P) over the threaded socket (O) and place the Socket Washer (Q) onto the threaded socket (O) and secure both by threading the Socket ring (R) until tight.
 16. Install the light bulb in accordance with the fixture's specifications.
- (DO NOT EXCEED MAXIMUM WATTAGE RATING!)

Fig 2

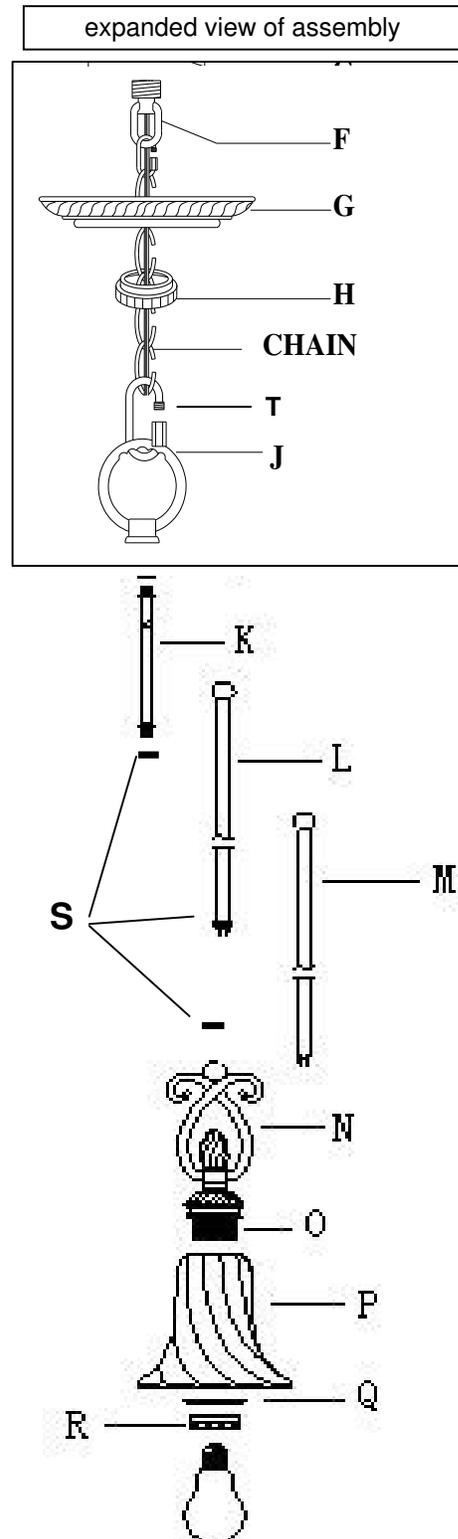

For Customer Service, contact the place of purchase to arrange for replacement parts.

WARNING ! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig.1)

1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
3. Thread Nipple(C) into Canopy Loop (F) until snug.
4. Thread other end of the Nipple (C) with Canopy Loop attached into Mounting Strap (D).
5. Place Lock Washer (B) over end of Nipple (C) protruding through Mounting Strap (D) and thread Hex Nuts (A) onto Nipple until tight.
6. Take this mounting strap assembly and mount to ceiling junction box with junction box Screws (E). Tighten screw securely with screw driver.
7. Unscrew the Canopy loop collar (H) from the Canopy loop. Take the canopy and pass over the Canopy loop. approximately one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. *the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy lock collar.
8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
9. Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.

CONNECTING THE WIRES (Fig 2)

10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
11. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (D) or connect both wires together using the correct size of wire connectors.
 - NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.
12. Tuck these wire connections neatly into the Junction Box.
13. Raise Canopy (G) to the ceiling and secure in place by tightening the Canopy loop collar(H) into the Canopy Loop(F)
14. Install the light bulbs and glass shade as per the fixture assembly sheet.

Fig. 1


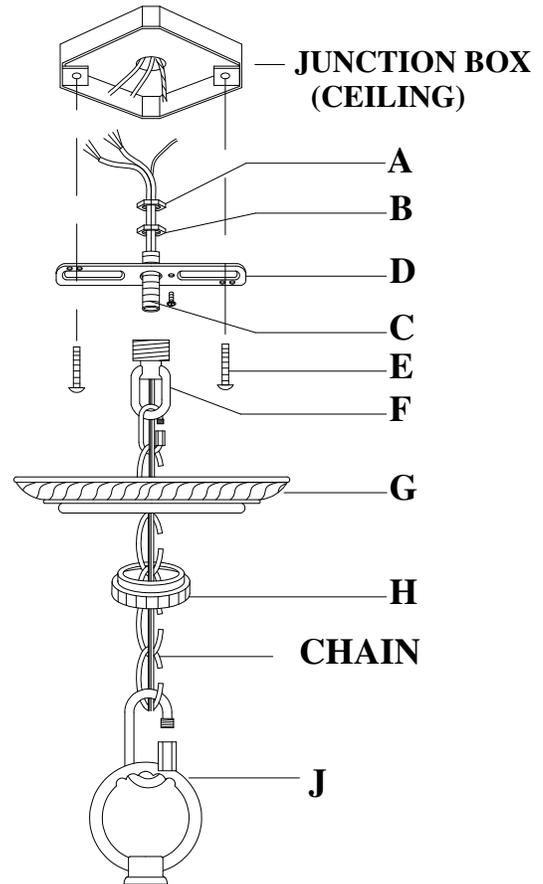


Fig. 2

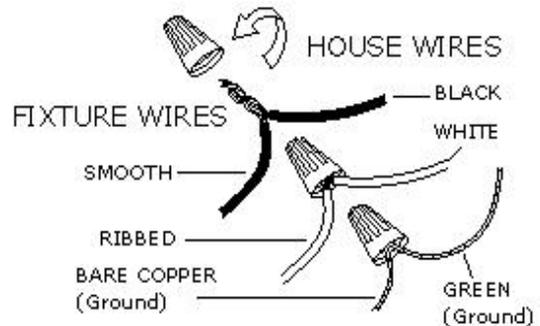

**YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX
AND TEST THE FIXTURE.**