

PARTS & ASSEMBLY SHEET

Fixture Name: Woodbriar 8995-3P SBZ

| This fixture assembled PO: D |)ate: |
|------------------------------|-------|
|------------------------------|-------|

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note onthis sheet and contact the place of purchase to arrange for replacement parts.

| PARTS LIST | Company Name:Co. Account #: | | |
|---------------------------------------|--------------------------------------|----------------------|---|
| FANIS LIST | to be filled out by retailer | | |
| Canopy | Mounting Screws | Top loop | |
| 1ea Ø5"*H1" | 2ea 8#32-IP*1" | 1ea 1/8-IP*H60mm | |
| Chain | Wire connectors | Nipple | |
| 1ea 6ft Ø4.2 | 3ea P3 Orange | 1ea 1/4-IP*H50mm | |
| Chain connector | Canopy loop with Collar | Mounting strap | |
| 2ea ø5.8*H61mm | 1ea Ø1-1/8"*H42mm | 1ea W4-1/8"*E1"*H5mm | 9 |
| Nipple | Bottom cap | Finial | |
| 1ea 1/8-IP*H135mm | 1ea ø3"*H21mm | 1ea 1/8-27-IP*H18mm | |
| Fixture Screws | Fixture ring | Сар | |
| 3ea 5/32-IP*1/2" | 1ea 18-3/4*60MM" | 1ea ø2"*H8mm | |
| Part Needed | | Quantity | |
| Part Needed | | Quantity | |
| Reason why (missing, scratcl Comments | ned, broken glass, bent, bad finish) | | |


FIXTURE ASSEMBLY INSTRUCTIONS


Read and review installation instruction sheet before assembling the fixture.

ASSEMBLING THE FIXTURE (Fig.1)

- 1. Gently spread the arms until evenly spaced if arms are packed closed.
- 2. Align the hole in the frame arm (O) with frame ring (P) then lock until tight with Fixture screws(N).
- 3. Thread the diffuser (R) with socket assembly into the center column until tight.

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.



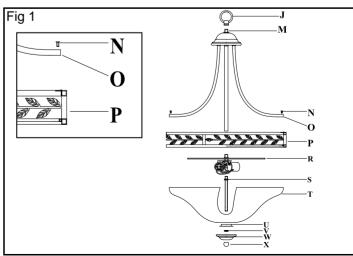

PARTS & ASSEMBLY SHEET

Fixture Name: Woodbriar 8995-3P SBZ


ASSEMBLING THE FIXTURE (Fig. 2)


- 4. Feed the fixture wires through the Top loop (J) and pull the wires until taut.
- 5. Then screw the Top Loop (J) to the coupling on the top of fixture (M) until tight.
- 6. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain (K) then remove the excess Chain (K) and discard it.
- 7. Use one chain connector (L) to attach one end of the chain to the Top loop (J) and close the chain connector.
- 8. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.
- 9. Slip Canopy loop collar (H) over the chain, then do the same with the canopy (G).
- 10. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (F) and close the chain connector.
- 11. Make sure the weight of the chandelier is supported by the chain-not the electrical wire.
- *You may now hang the fixture


Note: Complete these remaining steps after the fixture is hung. (Fig. 4)

- 12. Thread Nipple (S) to coupler in socket assembly, secure with hex nut.
- 13. Install the light bulbs in accordance with the fixture's specifications.
- 14. Install Glass Shade (T) and place Cap (U) to hold glass (S), lock until tight with Hex Nut (V).
- 15. Finally install Bottom Cap (W), lock until tight with Finial (X).

DO NOT EXCEED MAXIMUM WATTAGE RATING!

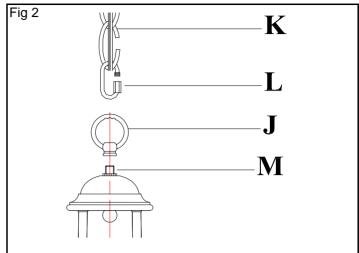

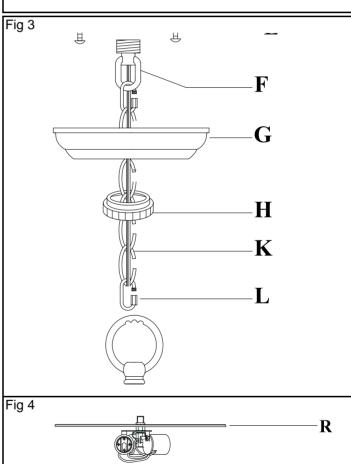

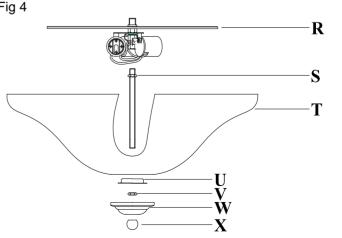

For Customer Service, contact the place of purchase to arrange for replacement parts.



INSTALLATION INSTRUCTIONS

Fixture Name:

Woodbriar 8995-6/9/3P SBZ

For Chandelier Light Fixture

WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig.1)

- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
- 3. Thread Nipple(C) into Canopy Loop (F) until snug.
- 4. Thread other end of the Nipple (C) with Canopy Loop attached into Mounting Strap (D).
- 5. Place Lock Washer (B) over end of Nipple (C) protruding through Mounting Strap (D) and thread Hex Nuts (A) onto Nipple until tight.
- 6. Take this mounting strap assembly and mount to ceiling junction box with Mounting screws (E). Tighten screw securely with screw driver.
- 7. Unscrew the Canopy loop collar(H) from the Canopy loop. Take the canopy and pass over the Canopy loop. approximatly one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. *the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy lock collar.
- 8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
- 9. Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.

CONNECTING THE WIRES (Fig 2)


- 10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 11. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (D) or connect both wires together using the correct size of wire connectors.


NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.

12. Tuck these wire connections neatly into the Junction Box.

FINISHING THE INSTALLATION

- 13. Raise the Canopy (G) to the ceiling. Secure in place by tightening the Canopy Loop Collar (H) onto the Canopy Loop (F).
- 14. Install the light bulbs and glass shade according to the fixture assembly sheet.

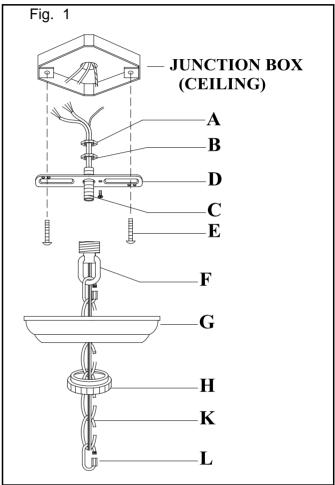

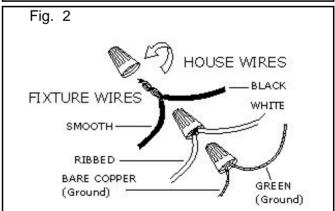

YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX
AND TEST THE FIXTURE.